



## Volvo XC60 II ab 2017

Part Number: 10067s-a

Date: 19-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

**ClimAir**  
ar comfort

PLAVA Kunststoffe GmbH  
Am Spitzacker 22 - 61184 Karben


|                                                                                        |                                                                               |
|----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| <b>GB</b> Car darkening set doors<br>Installation Instruction                          | <b>N</b> Bilvinduet missfarging dører<br>Installasjonsveiledning              |
| <b>D</b> Autoscheibenverdunklung Türen<br>Einbauanleitung                              | <b>S</b> Bilrutan nyanserings dörrar<br>Monteringsanvisning                   |
| <b>E</b> Ventana de coche puertas de tintado<br>Instrucciones de instalación           | <b>SF</b> Auton ikkunasta sävytystä ovet<br>Asennusohjeet                     |
| <b>F</b> Portes teinter fenêtre de voiture<br>Instructions d'installation              | <b>CZ</b> Okno auto tónování dveře<br>Pokyny k instalaci                      |
| <b>I</b> Finestrino della macchina porte colorazione<br>Istruzioni per l'installazione | <b>H</b> Autó Ablakszínezés ajtók<br>Szerelési útmutató                       |
| <b>P</b> Portas tintométrico janelas do carro<br>Instruções de instalação              | <b>PL</b> Drzwi okienne samochod barwiących<br>Instrukcje instalacji          |
| <b>NL</b> Auto raam verven deuren<br>Installatie-instructies                           | <b>GR</b> Παράθυρο του αυτοκινήτου πόρτες χρωματισμού<br>Οδηγίες εγκατάστασης |
| <b>DK</b> Bil vindue toning døre<br>Monteringsvejledning                               | <b>RUS</b> Окрашивание двери окна автомобиля<br>Инструкция по монтажу         |




2 x



8 x

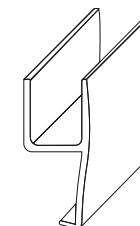

SC1-50

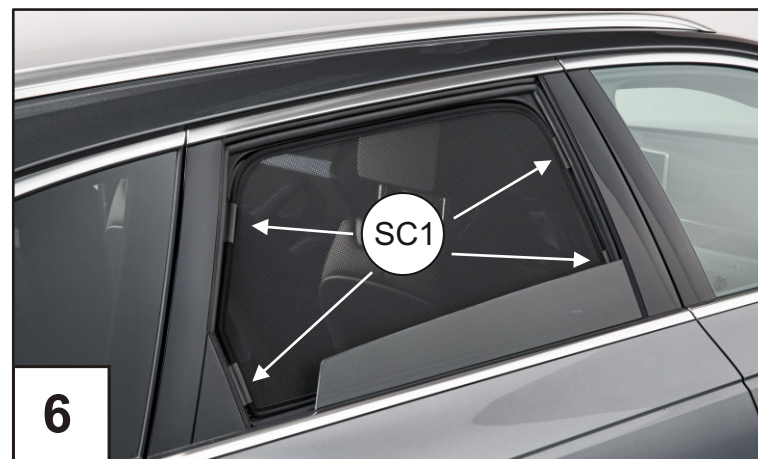

# Volvo XC60 II ab 2017



PLAVA Kunststoffe GmbH  
Am Spitzacker 22 - 61184 Karben

Part Number: 10067s-b

Date: 19-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

|                                                                                                       |                                                                                    |
|-------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <b>GB</b> Car darkening set side windows<br>Installation Instruction                                  | <b>N</b> Missfarging sidevindu bilvinduét<br>Installasjonsveiledning               |
| <b>D</b> Autoscheibenverdunklung Seitenfenster<br>Einbauanleitung                                     | <b>S</b> Nyanseringssidor bilfönster<br>Monteringsanvisning                        |
| <b>E</b> Ventana lateral teñidos de ventana de coche<br>Instrucciones de instalación                  | <b>SF</b> Auton ikkuna sävytystä sivuikkunan<br>Asennusohjeet                      |
| <b>F</b> Portes teinter fenêtre de voiture<br>Instructions d'installation                             | <b>CZ</b> Okno auto okno tónování side<br>Pokyny k instalaci                       |
| <b>I</b> Finestra laterale colorazione della finestra di automobile<br>Istruzioni per l'installazione | <b>H</b> Autó Ablakszínezés oldalablak<br>Szerelési útmutató                       |
| <b>P</b> Janela lateral tintométrico janela do carro<br>Instruções de instalação                      | <b>PL</b> Okno boczne okno barwienia samochod<br>Instrukcje instalacji             |
| <b>NL</b> Auto raam verven zijruit<br>Installatie-instructies                                         | <b>GR</b> Παράθυρο πλευρά χρωματισμού παράθυρο αυτοκινήτου<br>Οδηγίες εγκατάστασης |
| <b>DK</b> Bil vindue vindue toning side<br>Monteringsvejledning                                       | <b>RUS</b> Сторона тонировка стекла Автостекло<br>Инструкция по монтажу            |




2 x



2 x



SC8-20

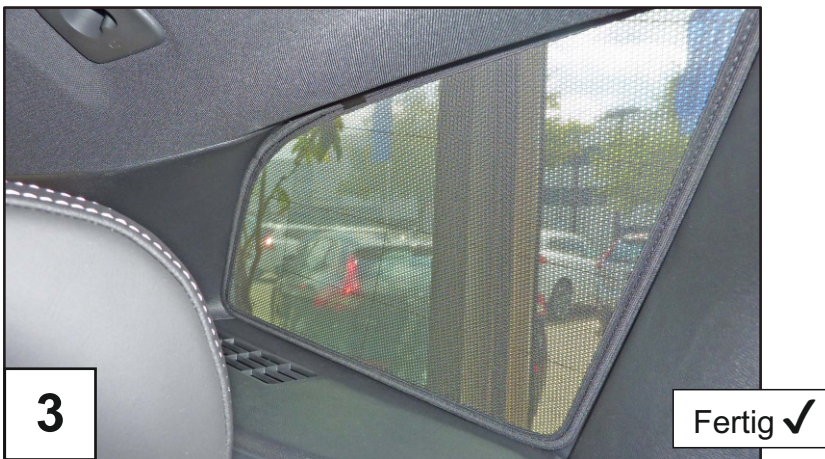



## Volvo XC60 II ab 2017

Part Number: 10067s-c

Date: 19-12-2019

Sheet 1 of 4

© Copyright Windesa GmbH

**ClimAir**  
ar omfort

PLAVA Kunststoffe GmbH  
Am Spitzacker 22 - 61184 Karben

**GB** Car darkening set rear window  
Installation Instruction

**D** Autoscheibenverdunklung Heckfenster  
Einbauanleitung

**E** Teñido de ventana trasera ventanilla del coche  
Instrucciones de instalación

**F** Fenêtre arrière teinter fenêtre de voiture  
Instructions d'installation

**I** Finestra colorazione lunotto auto  
Istruzioni per l'installazione

**P** Tingimento de janela traseira janela do carro  
Instruções de instalação

**NL** Autoruit raam verven achter  
Installatie-instructies

**DK** Vindue toning bageste bil vindue  
Monteringsvejledning

**N** Bilvinduet vindu missfarging bak  
Installasjonsveiledning

**S** Bilfönstret nyanser bakruta  
Monteringsanvisning

**SF** Auton ikkuna sävytystä takalasin  
Asennusohjeet

**CZ** Okno auto okno tónování zadních  
Pokyny k instalaci

**H** Autó Ablakszínezés hátsó ablak  
Szerelési útmutató

**PL** Okna samochodu tylne okno barwienia  
Instrukcje instalacji

**GR** Παράθυρο του αυτοκινήτου φινιρέ τζάμια πίσω  
Οδηγίες εγκατάστασης


**RUS** Окна автомобиля тонировка заднего стекла  
Инструкция по монтажу



1 x



1 x

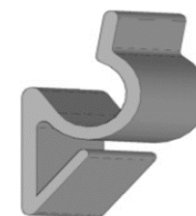

SC9-20

